

# VESTEL


## SERVİS



# Service Manuel

Dishwasher

**Energy Label**

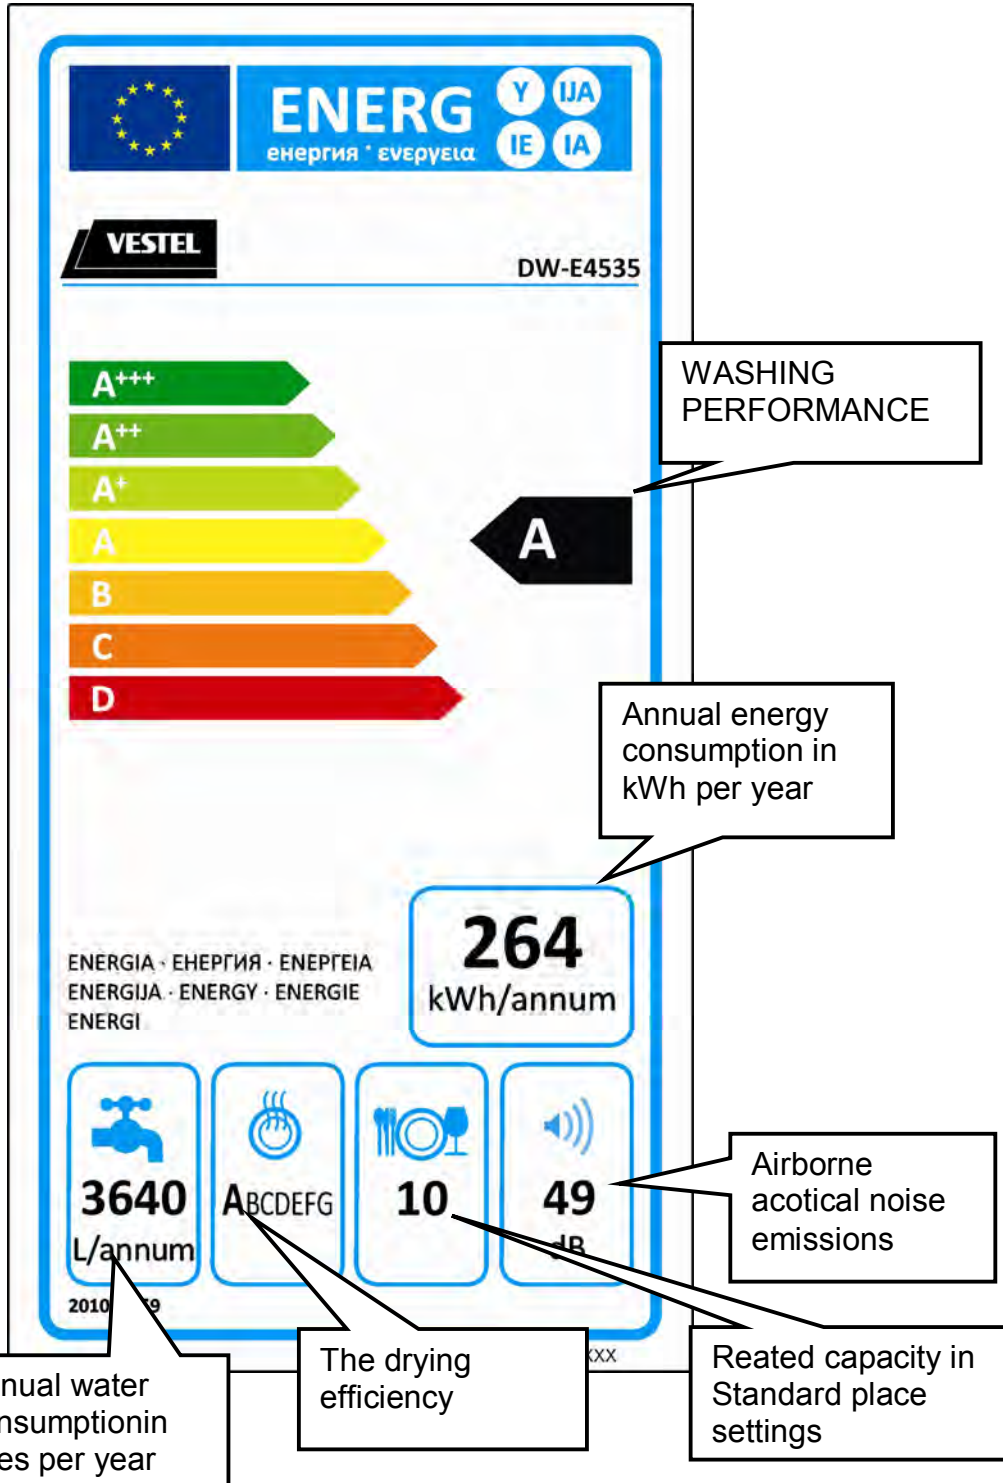



# SERVICE MANUEL

## NAME PLATE

<b>LOGO</b> MODEL:XXXX TYPE XXXXXXXXXXXXXXXX	220-240 V ~ 50Hz	RoHS	KEMA EN 300052	CE	RoHS		20655055071003 20655055 label number 07 year 10 Month 03 day
	10A						
	(M) 100W						
	W Max: <b>1900 W</b>						
Class: X	<b>BARCODE</b> 5A6D000C092D00C00C07C0						

SERIAL NUMBER  
0061484300003644000\*

00 empty

614843 Product codes

00003644 orders for goods code

001 serial number

**Model:XXXX** **Logo:XXXX**

## Electrical Components

### Button ( On / Off Switch )

Button is assembled in the control panel unit.  
**On / Off** ( two pole )


Voltage	250 V
Current	50mA



### *Door Lock*

It is a mechanical lock/release system that is closing the door, supplying the connection of electrical parts in the machine and cutting off the connection..

Current	16 (4) A
---------	----------

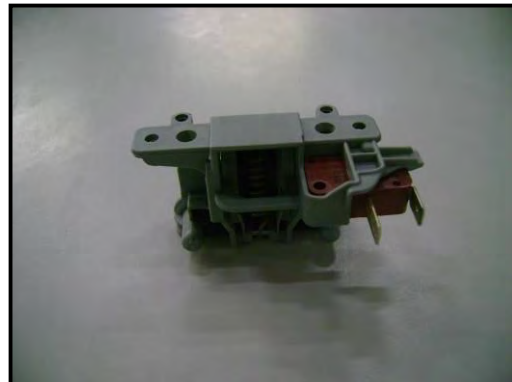

## ***HEATER INTEGRATED WASHING PUMP***

### **Washing Pump;**

Voltage	220/240 V
Frequency	50 Hz
Total Power	72W (230Volt)
Coil Isolation Class	F
Main(First) Coil	$95 \pm 7 \Omega$
Sub(second) Coil	$126 \pm 7 \Omega$
Thermal Protector	109 °C
Pump Outlet Pressure	280 mbar




**Pump Flowrate**                      50 lt / dk  
*Single direction, single phase, asynchronous and two pole.*  
*It turns opposite clock direction.*  
*It is assembled to the basement with rubber hangers.*

### **HEATER INTEGRATED**

**Voltage**                                220/240 V  
**Total Power**                      1800 +- %5 W (230Vac)  
**Resistance**                         27,25-31,8 Ω

It is used to heat the washing water.  
 Heater is not active during the drying process.  
 It is assembled to the sump and located to the Supply side of circulation pump.

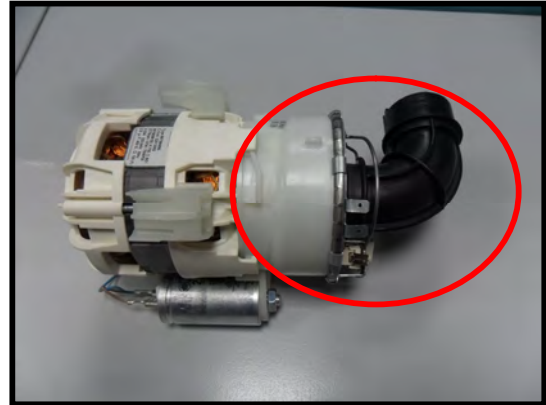

### **Capacitor**

2,5 μ F – 450 V class P2  
 Capacitor is permanently connected to the circulation pump coils.



### **Drain Pump**

**Voltage**                                220/240 Volt  
**Frequency**                          50 Hz  
**Total Power**                      30 W  
**Flowrate**                            17-21 lt/dk  
**Coil Resistance**                 143 Ω % ± 7  
**Coil \_solation Class**            F  
**Thermal Protection**            120°




### **Water Inlet Valve**

**Voltage**                                220/240 Volt  
**Frequency**                          50-60 Hz  
**Total Power**                      6 W  
**Flowrate**                            2,5 lt/dk  
**Coil \_solation Class**            F Resistance                            120° C



**Eco**

This part is provide a connection between sump and washing pump.

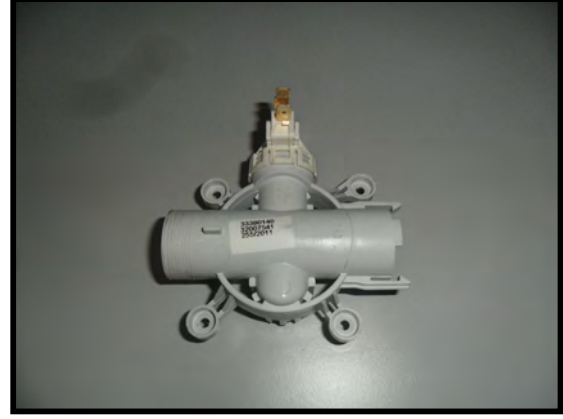


**NTC**

Sıcaklıklar / Direnç karakteristiği


+25 °C	-	47.200	±1.416	Ω
+30 °C	-	37.500	±1.125	Ω
+40 °C	-	24.900	± 747	Ω
+50 °C	-	17.000	± 510	Ω
+60 °C	-	11.700	± 351	Ω
+70 °C	-	8.280	± 248	Ω
+80 °C	-	5.945	± 178	Ω

This part is exist on the sump.

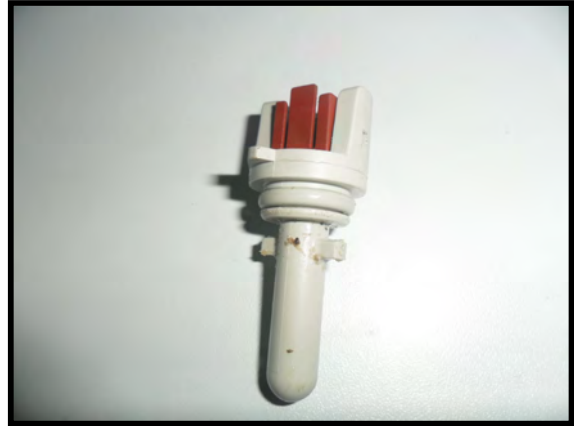

***Pressure Switch***

Voltaj 220/240 V  
Frekans 50 Hz 16 A – 3 Kontaklı

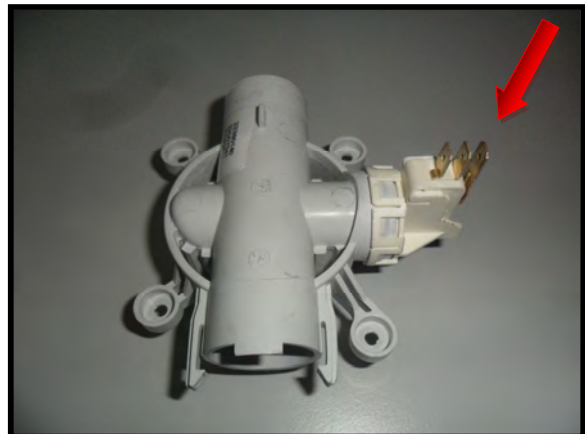

## ***Regeneration Valve***

Voltage 220/240 V  
Frequency 50/60 Hz  
Total Power 6 W  
Resistance  $4130 \pm 10 \Omega$  ( 25 C° )

Regeneration valve is assembled on the water softener..



## ***Parasite Filter***

Voltage 220/240 V  
Frequency 50/60 Hz

$0,1 \mu\text{F}$  (X1) +  $2 \times 0,015 \mu\text{F}$  (Y2) +  $1 \text{M} \Omega$

It is used to prevent parasites from the main supply. It has been assembled to basement..



## ***Power Cord***

Type Euro 3'lü 1 mm<sup>2</sup>, copper conducting  
Isolation T S 9 7 6 0 H05VV-F  
Plug TS-IEC 60884-1 PVC injected Boy  
Length 1800 mm



## ***Drain Hose***

Drain hose maximum height 110cm

Drain hose minimum height 50cm

Drain hose maximum length 400cm


Total Power 15 W

Voltage 220/240 V

Frequency 50 Hz.

Resistance 238.6± 5 \_

Coil isolation class: H

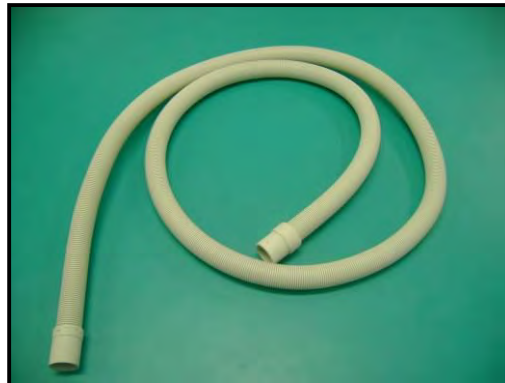

## ***Detergent / Rinse Aid Dispenser***

Detergant dispenser consists of rinse aid and detergent compartment. It has been assembled to the inner door by the snap fits. Only one bobbin has been used for operating the system.













# SERVICE MANUEL

## Water Softener


Resin Quantity 0,45lt  
 Capacity of salt compartment 1,5 kg  
 Total hardness adjustment level 6

Water Hardness level	German Hardness °dH	French Hardness °dF	British hardness °dE	Water Liter
Level 1	0-5	0-9	0-6	-
Level 2	6-11	10-20	7-14	160lt
Level 3	12-17	21-30	15-21	89lt
Level 4	18-22	31-40	22-28	59lt
Level 5	23-31	41-55	29-39	46lt
Level 6	32-50	56-90	40-63	16lt


## Adjusting salt consumption

Water Hardness Level	British Hardness dE	Hardness Level Indicator
1	0 - 6	 Wash/Dry Lamp is on End lamp is off Start/Pause Lamp is off
2	7 - 14	 Wash/Dry Lamp is on End lamp is off Start/Pause Lamp is off
3	15 - 21	 Wash/Dry Lamp is on End lamp is off Start/Paus Lamp is off
4	22 - 28	 Wash/Dry Lamp is on End lamp is off Start/Pause Lamp is off
5	29 - 42	 Wash/Dry Lamp is on End lamp is off Start/Pause Lamp is off
6	43 - 63	 Wash/Dry Lamp is on End lamp is off Start/Pause Lamp is off

## Control Panel

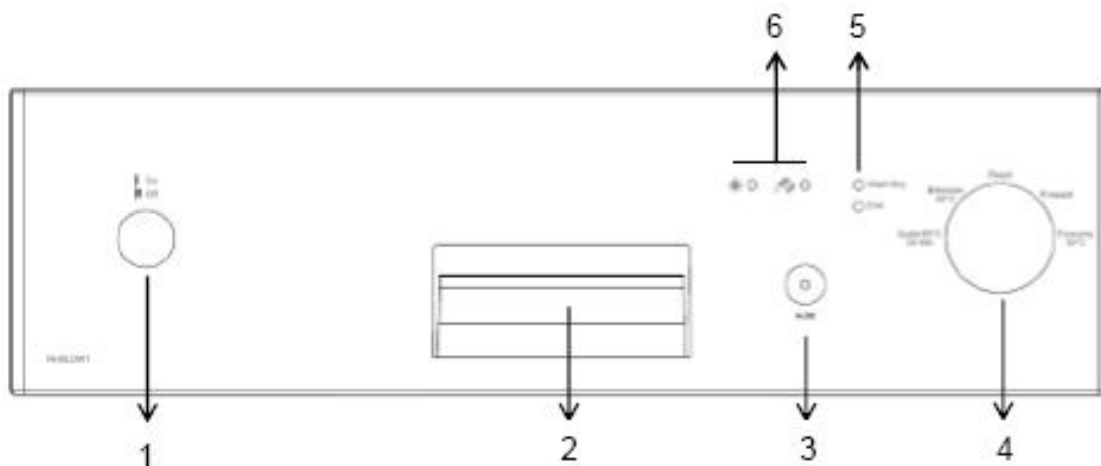


1. **Power on/off**  
When the power on/off button is pressed, the light on the Start/Pause button will illuminate.
2. **Door Handle**  
The door handle is used to open/close the door.
3. **Start/Pause Button**  
Once you press the Start/Pause button, the programme you selected with the selector button will start running and the indicator lamp 'wash/dry' will illuminate. If the programme is paused, the LED light will flash repeatedly.
4. **Programme selector knob**  
With the programme selector knob, you can select your desired programme by turning clockwise and anti-clockwise.
5. **Status indicator**  
You can monitor the current status of your programme by using the indicator light shown above (5). There are two progression states, 'wash/dry' and 'End'.
6. **Low salt indicator**  
If the low salt indicator light is illuminated, ensure to replenish the salt supply

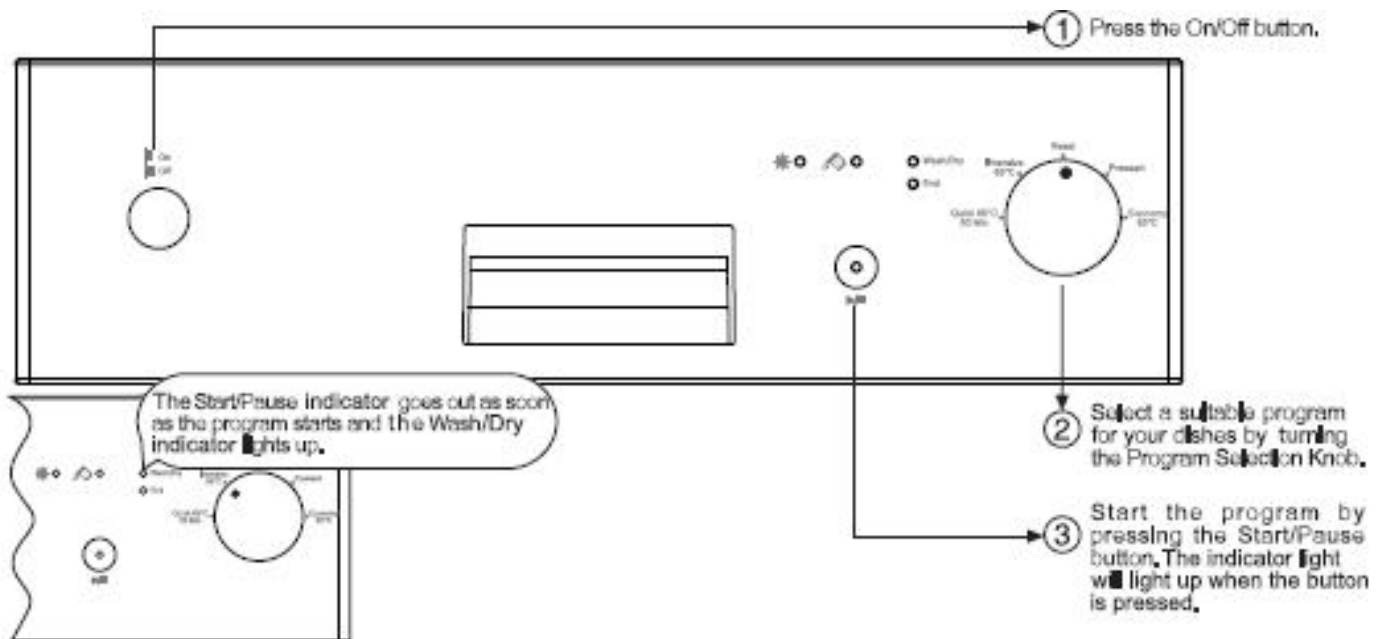


**PROGRAM FOLLOW-UP**

The indicator lights on the control panel allow you to follow the program cycle

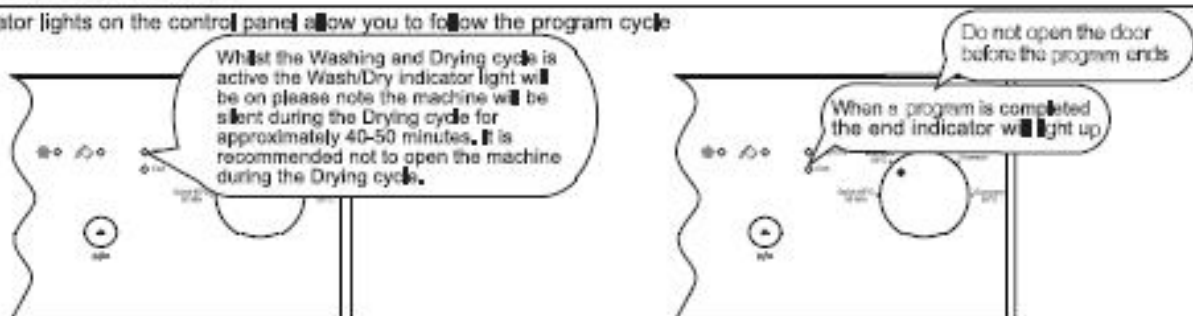


**CHANGING THE PROGRAM**

If you would like to change the program when a washing program is already in progress:

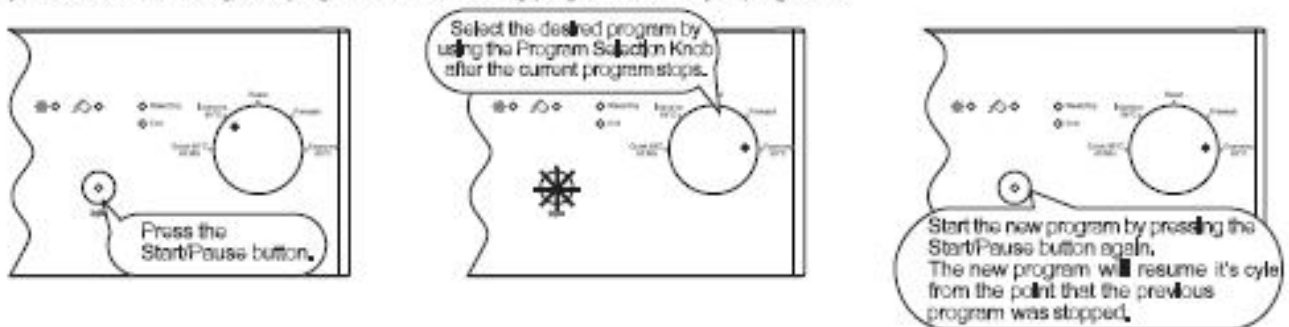


**CANCELLING A PROGRAM**

If you would like to cancel a washing program while it is running:

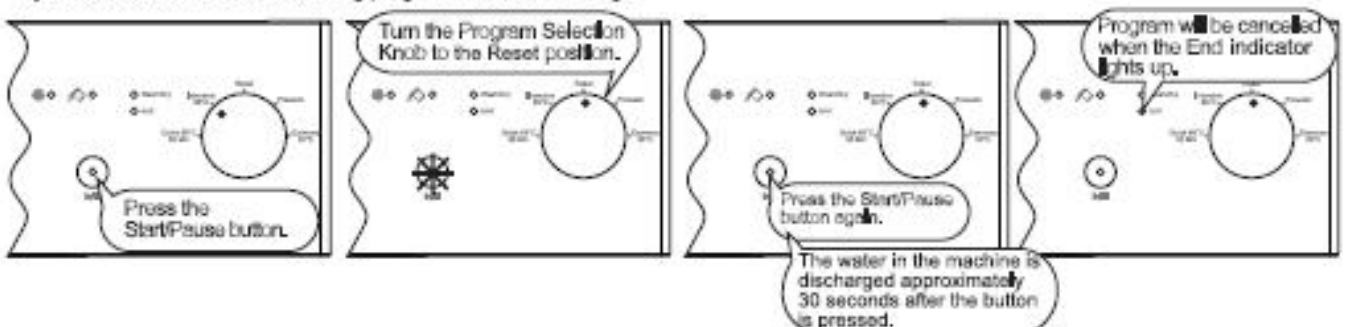

## Adjusting salt consumption

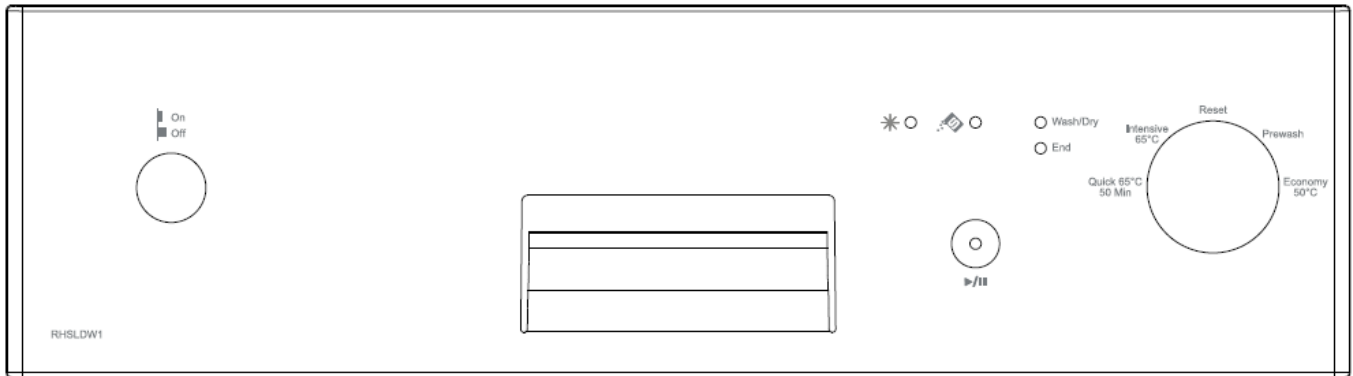

Move the programme selector knob to the 0 position (1) while the power button is off.



After switching the programme dial to 0, press the Start/Pause button and hold it down.



While the start button is held down, press the On/Off button to switch the machine on (2)



Keep Start/Pause keys held down until the monitor lights illuminate (2)



After lights 'Wash/Dry/End' have flashed (3), release the Start/Pause

Your machine displays the latest entered water setting.



You can adjust the levels by pressing the Start/Pause button (2) according to the table of hardness settings above.



After adjusting the water hardness level, press on/off to save the settings in memory

### Programme items

Programme No	Prewash	Economic ( Reference )	Super Wash 50 min.	Intensive
Programme names and temperatures	-	50°C	65°C	65°C
Type of food waste	Pre-wash to rinse and loosen residue-awaiting full load-then select a programme	coffee,milk,tea,cold meats,vegetables ,not kept for long	soups, sauces, pasta, eggs, pilaf, potato and oven dishes, fried foods	soups, sauces, pasta, eggs, pilaf, potato and oven dishes, fried foods
Level of soil	-	medium	medium	high
Detergent amount A: 25 cm <sup>3</sup> / 15 cm <sup>3</sup> B: 5 cm <sup>3</sup>	-	A+B	A+B	A+B












  

Prewash	Prewash	65°C Wash	Prewash
End	50°C Wash	Cold rinse	65°C Wash
	Cold rinse	Hot rinse	Cold rinse
	Hot rinse	End	Intermediate rinse
	Dry		Hot rinse
	End		Dry
			End

Programme duration (min.)	15	160	50	115
Electricity consumption (kW hours)	0,02	0,93	1,31	1,45
Water consumption (liters)	3,8	13,6	10,5	17,6

## Error Codes

ERROR CODE			ERROR DESCRIPTION	CONTROL
Wash / Dry	End	Start/Pause		
			Inadequate water supply	<ul style="list-style-type: none"> <li>• Make sure the water input tap is totally open and that there is no water cut.</li> <li>• Close the water input tap, separate the water input hose from the tap and clean the filter at the connection end of the hose.</li> <li>• Restart your machine, contact the service if the error resumes.</li> </ul>
			Error of continuous water input	<ul style="list-style-type: none"> <li>• Close the tap.</li> <li>• Contact the service.</li> </ul>
			The waste water in the machine cannot be discharged.	<ul style="list-style-type: none"> <li>• Water discharge hose is clogged.</li> <li>• The filters of your machine might be clogged.</li> <li>• Power off-on your machine and activate the program cancellation command.</li> <li>• If the error continues, contact the service.</li> </ul>
			Intended water temperature could not be reached faulty heater and heater sensor	Contact the service.
			Alarm is active against water overflow	<ul style="list-style-type: none"> <li>• Power off your machine and close the tap.</li> <li>• Contact the service.</li> </ul>
			Faulty electronic card	Contact the service.

**DISASSEMBLY**

**1) ACCESSIBILITY**

**1.1) Top Plate**

a) Remove two screws that fix the top plate at the back.





b) Push the top-plate back and pull it up.



## 1.2 ) Front Panel

a) Remove six screws that fix the .front panel.

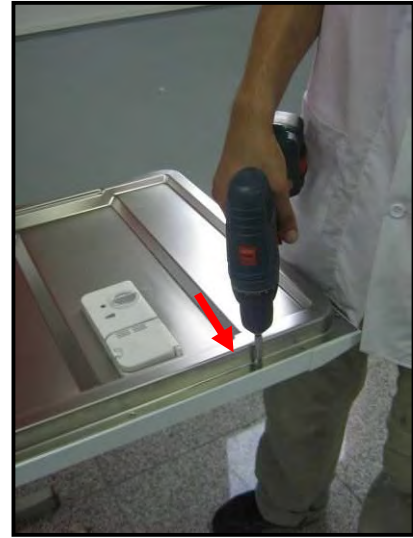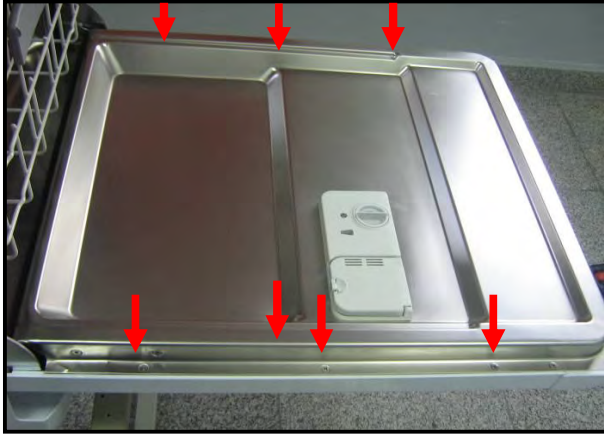


b).Pull down the front panel as it shown in the Picture.






**1.3 ) Plastic Kick plate**

a) Remove two screws fixing plastic kick plate.

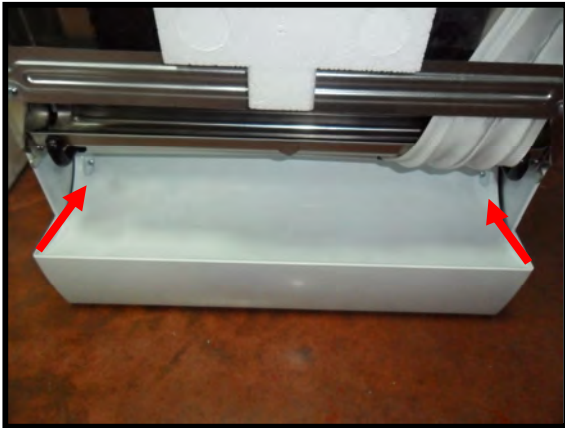

b) Remove the plastic kick plate as it is shown in the picture.

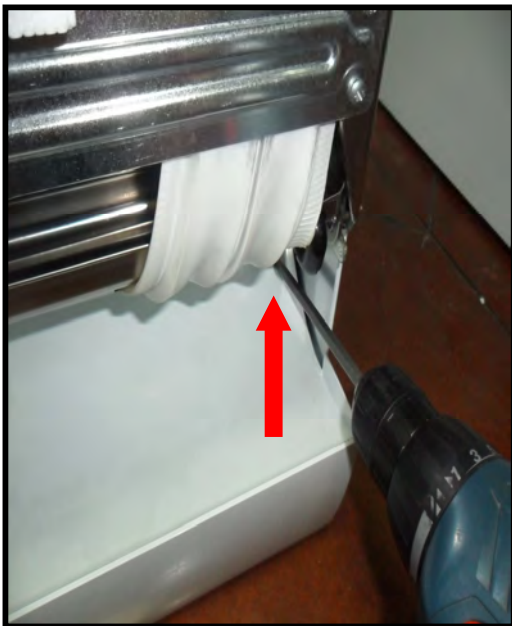

**1.4 ) Side panels**

Before removing side panels ;

a) Firstly remove the top plate. ( see1.1 )

b) Than remove plastic kick plate. (see1.3 )

While removing side panels ;

a) Remove six screws that fix side panels at the back..



b) Remove four screw covers carefully as it shown in the Picture.



C) Remove six screws whice are in front of the machine.



d) To remove the side panel , remove the upper plastic hinge and than the aboveone and pull it up.




**1.5 ) Kick Plate Sheet Iron**

- a) Remove top plate, plastic kick plate and side panels. ( see 1.1 ,1.3 , 1.4 )
- b) Remove two screws that fix the kick plate sheet iron.




- c) pull it down as shown in the picture.

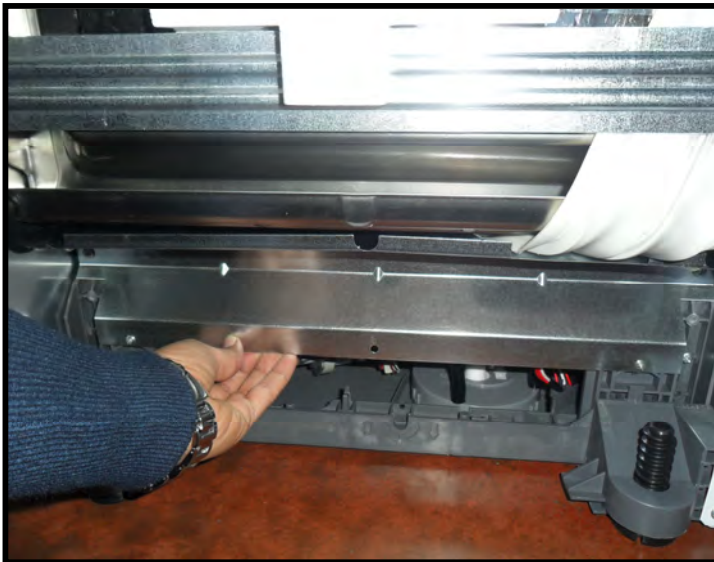

## 1.6 ) Control Panel

a) Remove six screws that fix control panel to the door inside sheet iron.

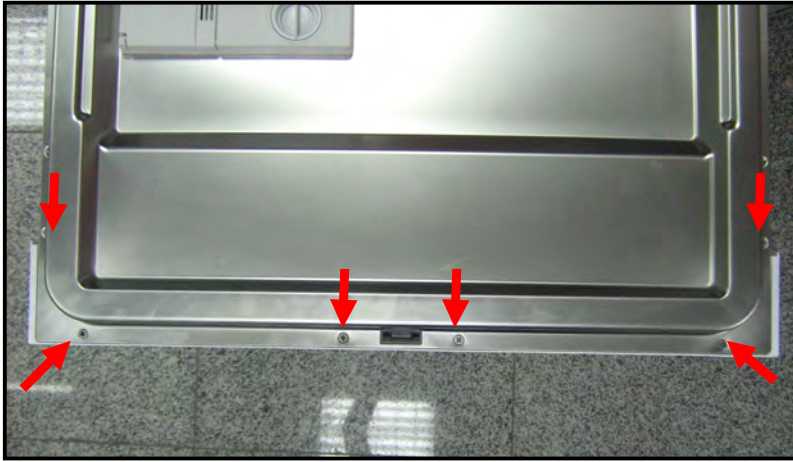

b) Remove the cable connection plastic which fix cable harness to the control panel as shown in the Picture.




c) Remove the control panel group carefully as shown in the picture.




d) Remove the wires that are connected to control panel group.

## 1.6.1 ) Rotary Switch

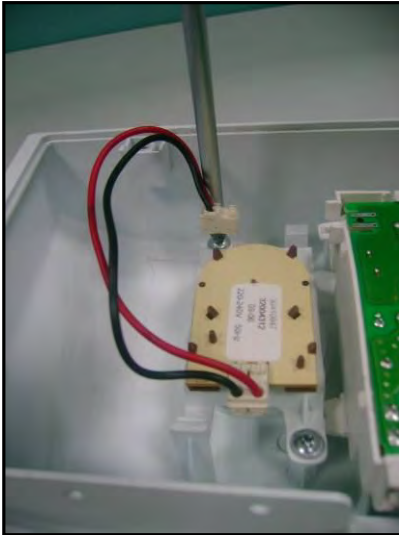


- a) Remove the control panel.( see 1.6 )
- b)Remove the wire that is connected to the electronic card.
- c) Remove two screws fixing to the control panel group.

## 1.6.2 ) Electronic Card

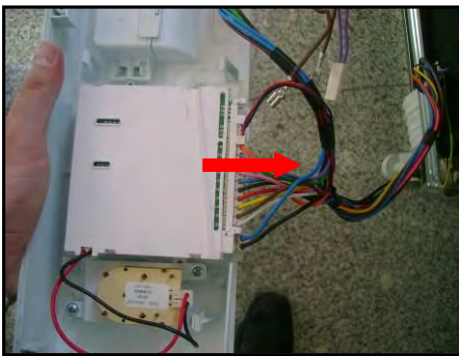

- a)Remove the wires that are shown in the picture. .
- WARNING:** while removing wires , do not pull them from wires , pull from connectors.
- b)Remove pcb box cover with pulling its plastic hinges.

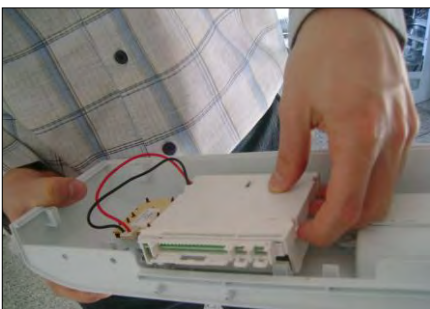

c) Remove the wire which is between rotary switch and electronic card.



d) Remove the electronic card from pcb box by removing pcb box's plastic hinges..



## 1.7 )Door Lock Group.

a) Remove control panel group. ( see 1.6)

b) Remove two screws that fix the door lock group.



## 1.8 ) Dispanser

- a) Remove the front panel ( see 1.2 )
- b) Remove the wire.
- c) Remove dispanser from inside door's hinges by using slotted screwdriver.
- d) Push and remove the dispanser .



**Warning :** use work gloves otherwise \_inside door iron sheet can cut your hands.


## 1.9 ) Door Inside

- a) Remove side panels. (see 1.4 )





b) Remove hinge spring from hinge cord group as it is shown in the picture.

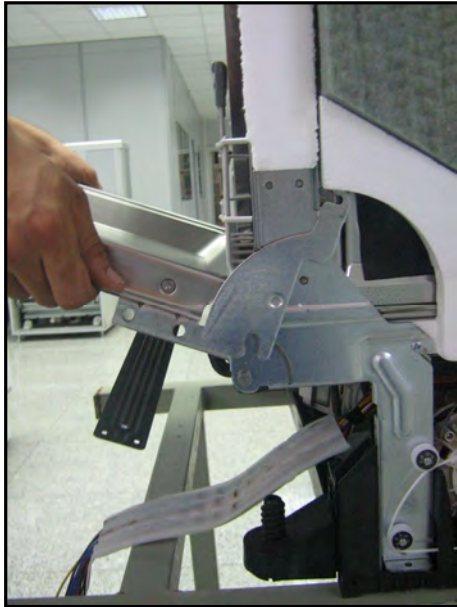

d) Pull the door inside up as it is shown in the picture..

e) remove two screws that fix hinge movement sheet iron to the door inside.



## THE INNER COMPONENTS

### 2. ) To Access The Components From Sides




a)Right Sight




b)Left Sight

**2.2 ) NTC with Thermal Protector**


a) Remove the right side panel (bkz 3.4 ). You will see the NTC which connected to the sump.

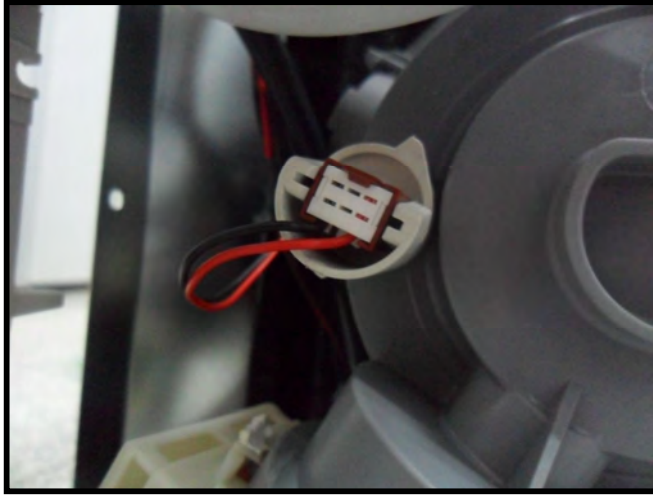

b) Remove the NTC connector.

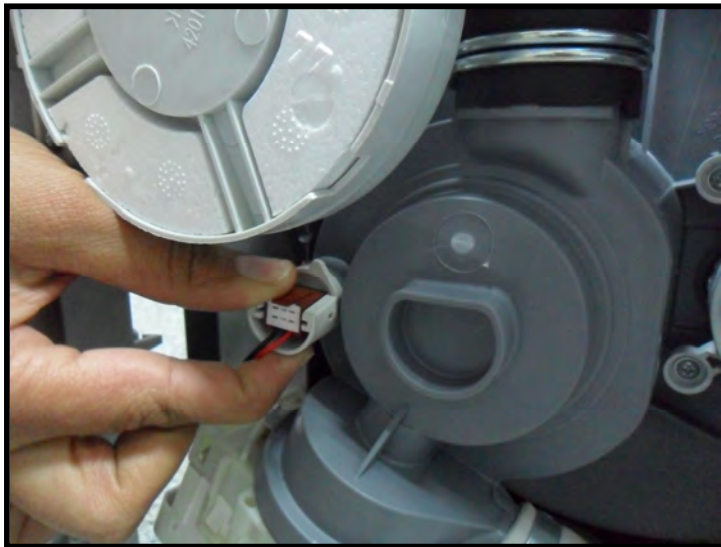


c) After NTC connector is removed, to remove NTC rotate counterclockwise and pull it as it is shown in the picture.

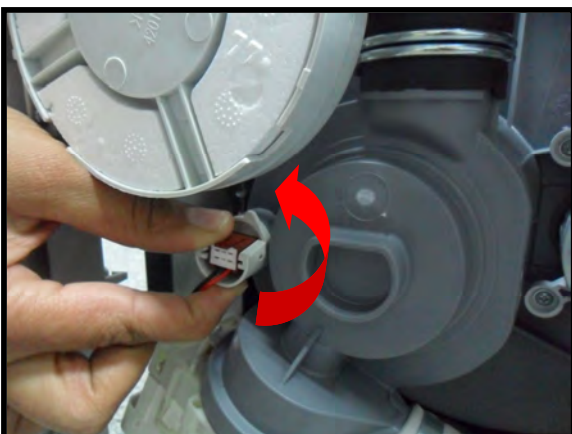

## 2.3 ) Air-Break

### 2.3 ) Air-Break

- a) Remove the left side panel of the machine.. (see 1.4 )
- b) open machine's door..
- c) Rotate counterclockwise air-break nut and remove it.

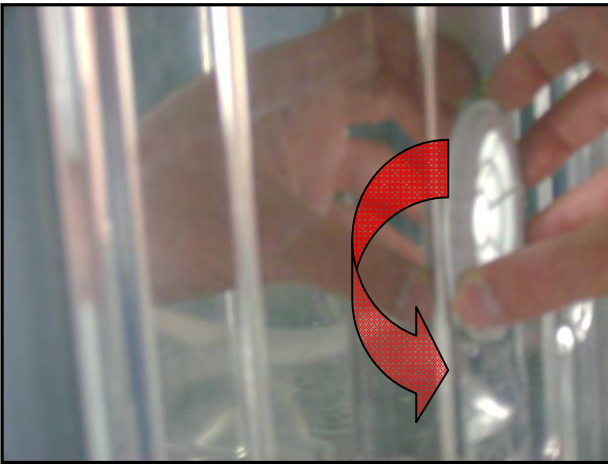


- d) Remove air –break's connections with salt cap as it is shown in the picture.( be careful about plastic hinges )



## 2.4 ) Hose Connection Plastic

a ) Remove left side panel. ( see 1.4 ).

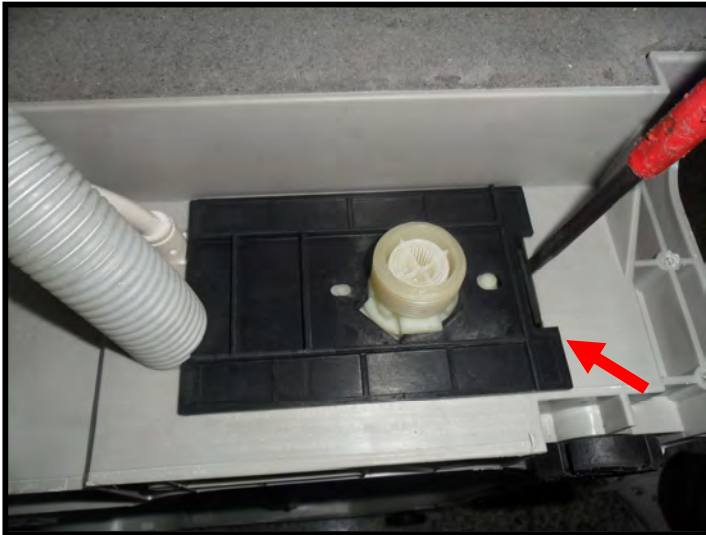

b)By using flat tip screwdriver remove hose connection plastic's hinge from the basement as it shown in the picture.



**2.5 ) Power Cord**

a ) Remove hose connection plastic.( see 2.3 )



b) Remove the lower cover.(see )

c) Remove the wires that is between power cord and parasite filter..



d ) Remove the power cord..

### 3. To Access The Components From \_n Front Of The Machine




a) Remove Plastic kick plate and .kick plate iron sheet.(see 1.3 – 1.5 )

#### 3.1 ) Regeneration Valve

a) Remove Plastic kick plate and .kick plate iron sheet.(see 1.3 – 1.5 )

b) Remove the wires...

c) To remove regeneration Value rotate counterclockwise and pull it as it is shown in the picture.

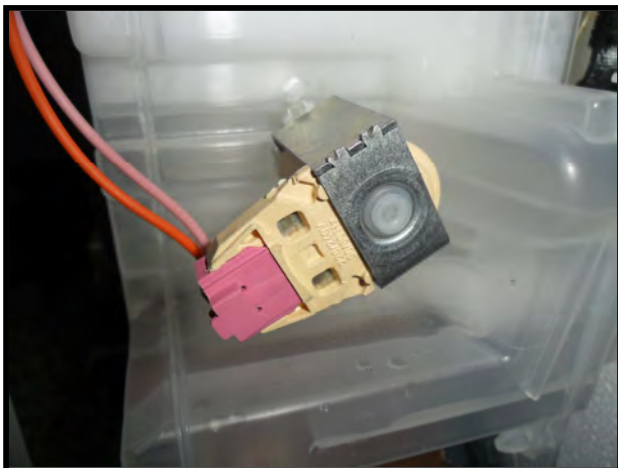


## 3.2) Drain Pump

a) Remove Plastic kick plate and .kick plate iron sheet.(see 1.3 – 1.5 )

b) Remove the wires..

c) To remove the drain pump that fixes to the sump, rotate it in the direction of counterclockwise and pull .

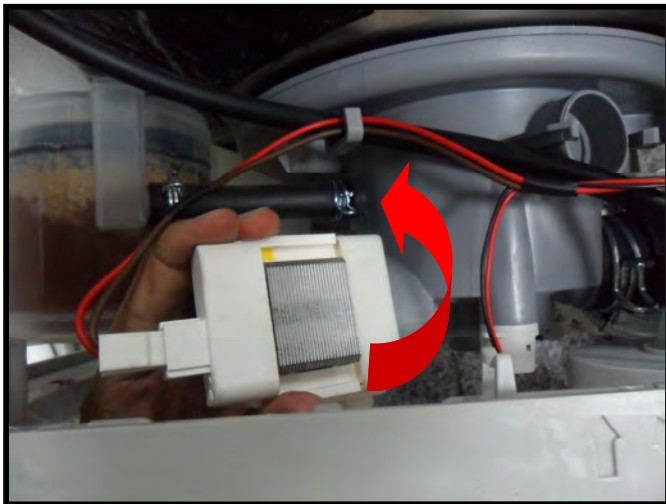

## 4.To Access The Components from the Lower Cover

a) Lay the appliance on the rear panel.






b) Remove lower cover from the places that are shown in the picture.




## 4.1 ) Washing Pump



a) Lay the appliance on the rear panel. (see 4 )

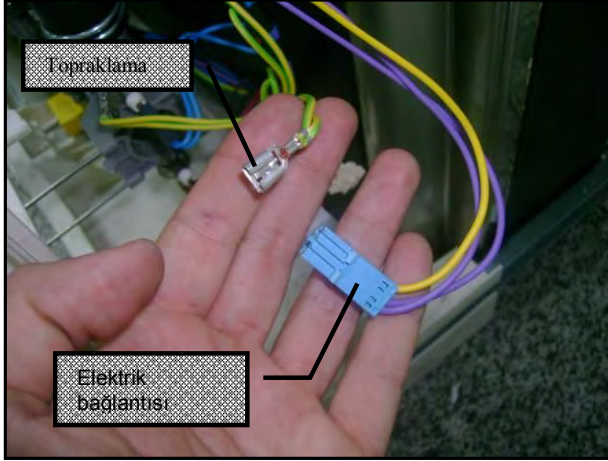


c) Remove two clamps that are shown in the Picture . ( Heater casing – circulation pump , sump – Circulation pump )

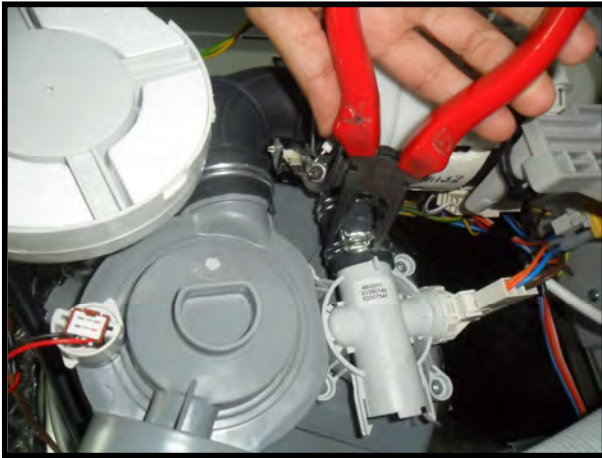

d) Yıkama pompasını alt tabana monte eden askılardan, kurtararak sökün.

## 4.2 ) Eco

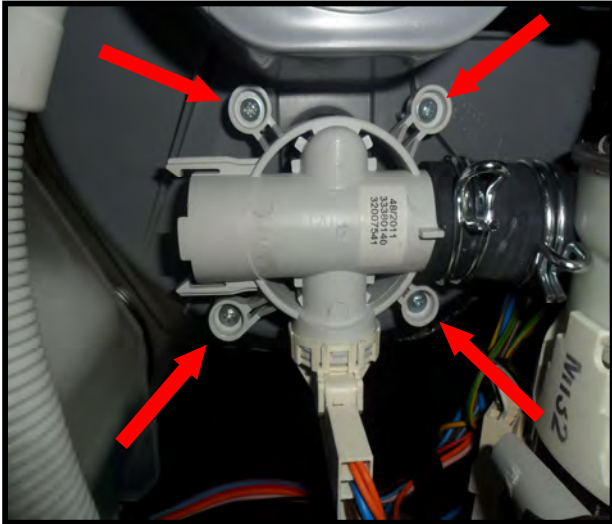

## 4.3 )Water Softener

- a)To remove salt cup cover, rotate it in the direction of counterclockwise. .




b) To remove salt cup nut , rotate it in the direction of counterclockwise .



c) Remove left side panel (see 1.4)

d) detach the connections which are between water softener and air-break.

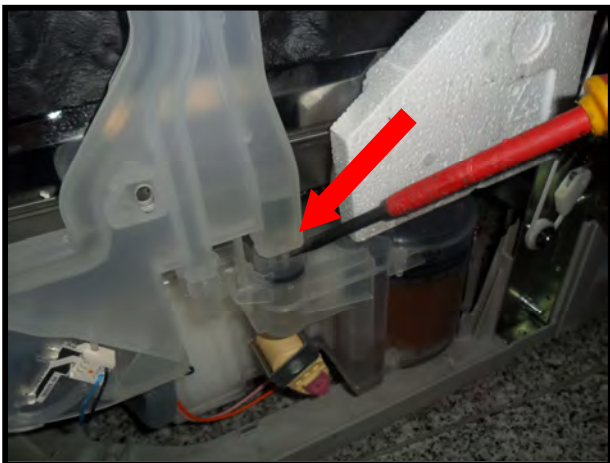


e) Remove lower cover.


f) Remove the hose that is between sump and salt camp.

## 4.4) Parasite Filtler

a) Remove lower cover.

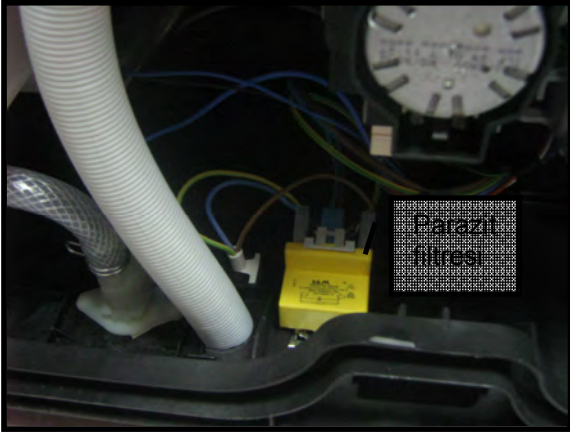


b) Remove one screw fixing parasite filter...

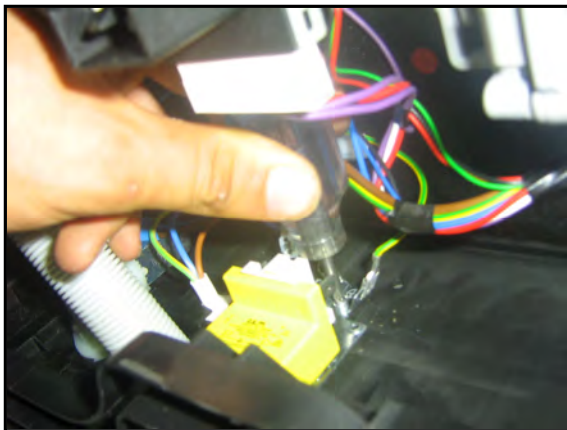

c) Remove wires..

d) Push parasite filter as shown in the picture..

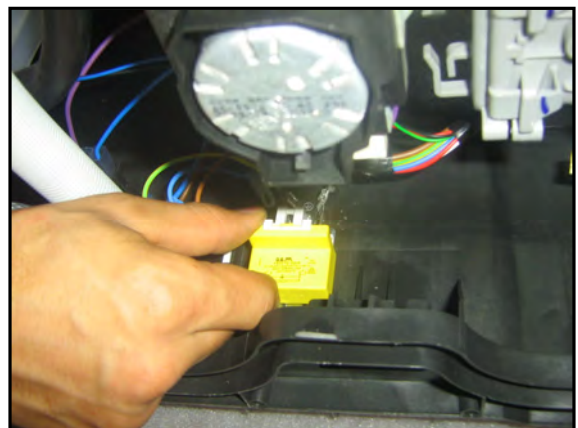

**4.5 ) Floater**

a) Remove lower cover.



b) Remove two screws that fix floater as it is shown in the picture.




c) Remove the two floater hoses .



d) Remove the wire that is connected to the floater.


**4.6 ) Water Inlet valve**

a) Remove lower cover.

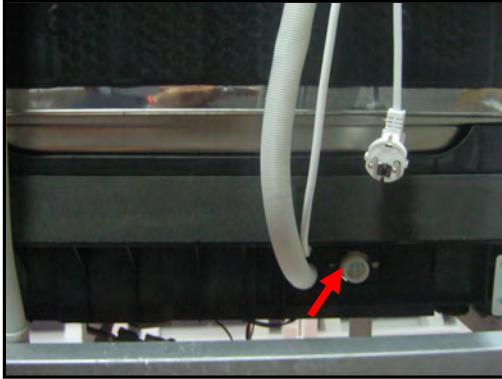


b) Remove the wire that is connected to the water inlet valve.

c) Remove the clamp that connects water inlet valve and air –break as it is shown in the picture.

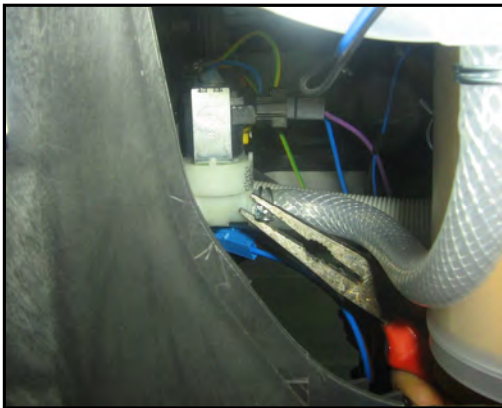

c) To remove water inlet valve pull it back as it is shown in the direction of Picture then release water inlet valve from the pins that is connected to . and rotate it in the direction of counterclockwise.

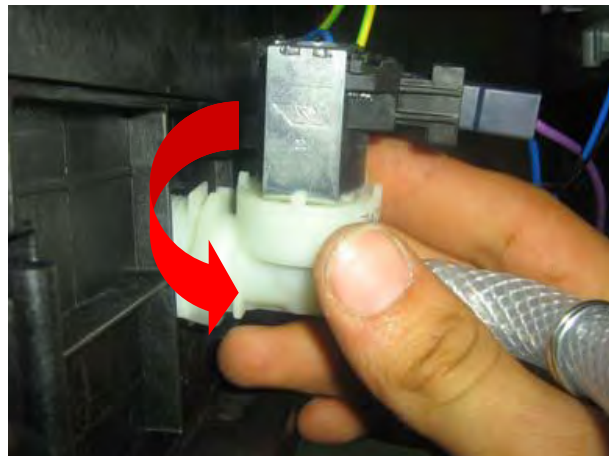

**4.7 ) Draining Hose**



- a) Remove the hose connection plastic.. ( see 4.4 )
- b) Remove lower cover. ( see 6 )
- c) Remove the clamp that fixes draining hose to the sump.
- d) Remove draining hos

**5 ) Basket Group**

**5.1 ) Lower Basket**



- a) Open machine's door.






## 5.2) Upper Basket



- a) Open machine's door.
- b) Pull the basket to yourself.

- c) Open Upper basket rail lock front.
- d) Pull the basket to yourself and remove it.



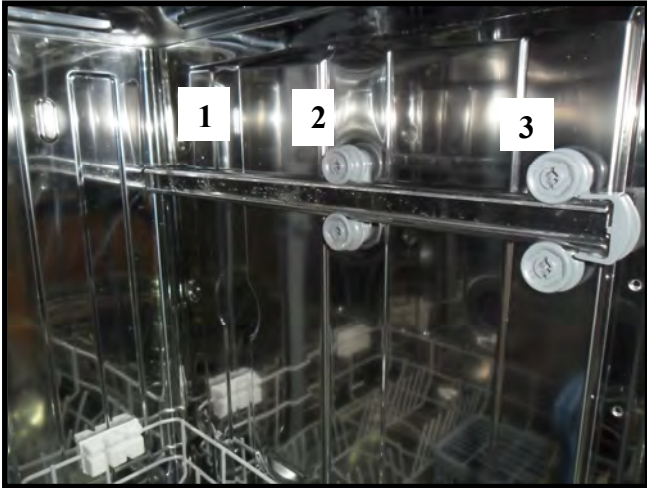

### 5.3 )Basket Rails

- 1- Upper basket rail stoper rear
- 2- Upper basket wheels
- 3- Upper basket rail lock front


## 6. ) The Components That Are \_nside the Tub

### 6.1 ) Course , Micro and metal filters

a)Open the door.

b)Remove lower basket.

c) to remove microfilter group rotate them in the direction of counterclockwise and pull them up as it is shown in the Picture.

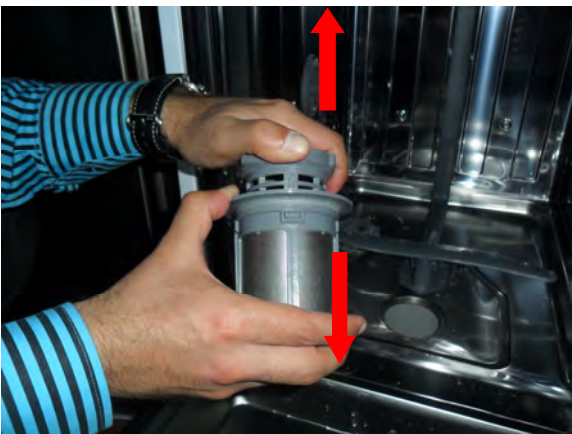

d)To remove microfilter group ( course filter and micro filter ) pull them as it is



e) to remove the metal filter pull it up as it shown in the picture.




a) To remove the basket rails, open the door and take out baskets.

b) To remove basket rails release the rail from upper basket stopper rear.



**6.2 ) Spray Arm System**

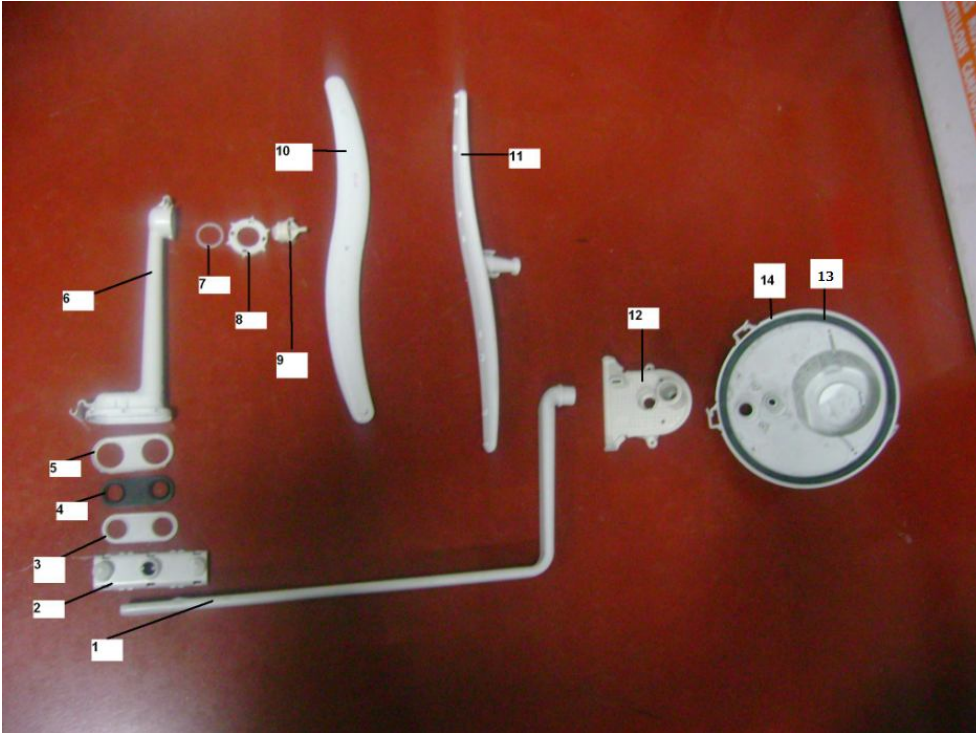

- 1 Upper spray arm feeding canal
- 2 Upper spray arm adjustment link
- 3 Upper spray arm adaptor flange
- 4 Upper spray arm adaptor gasket
- 5 Upper spray arm adaptor cover
- 6 Upper spray arm
- 7 Upper spray arm nut plastic
- 8 Upper spray arm nut
- 9 Upper spray arm shaft
- 10 Upper spray arm
- 11 Lower spray arm
- 12 Spray arm support
- 13 Sump seal
- 14 Sump



a) After removing the lower basket, pull the spray arm upwards, gripping it by the central hub.




b) To remove upper spray arm adjustment link, pull it through yourself as it is shown in the picture.



c) To remove upper spray arm feeding canal, turn left and then pull it up as it is shown in the picture.

## 6.3 ) Sump

- a) Remove any residual water from the sump by suction so that it does not flow into the tub and the pressure switch tubes , then lay the appliance on the rear panel.
- b) Remove lover cover. ( see 6 )
- c) From inside tub ,remove the basket and lower spray arm .
- d) Remove the microfilter group and metal filter .
- c) detach all the hoses (sump – draining hose , circulation pump – sump, sump – water softener)

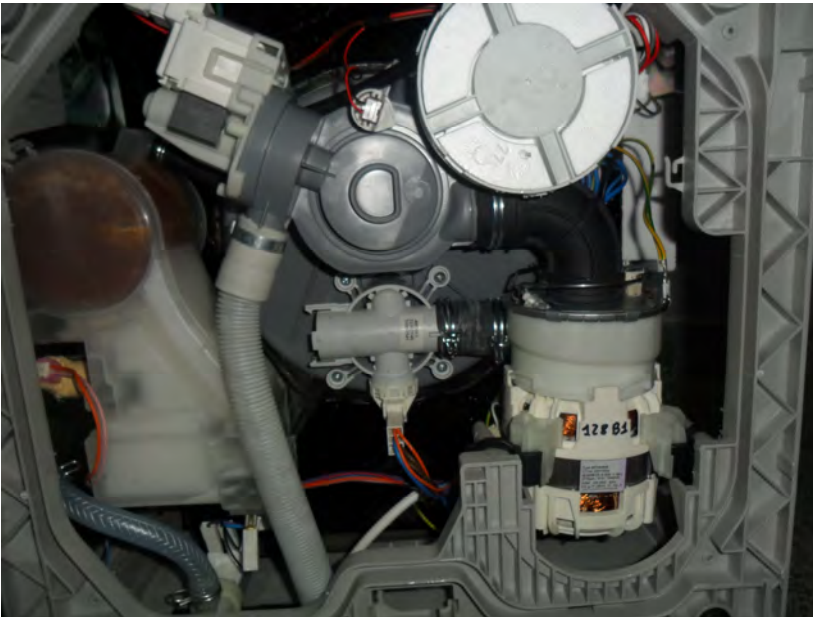


- f) Remove the four screws that secure the sump to the tub.
- g) Remove the two screws which secure the spray arm support to the sump.
- h) detach the drain pump and pull the sump out ,taking care not to damage the tub seal.

**Elektronik Kart Tipleri ve Diyagramları**

**PCB VE ELEKTRİK DEVRE ŞEMASI**

Tip 1

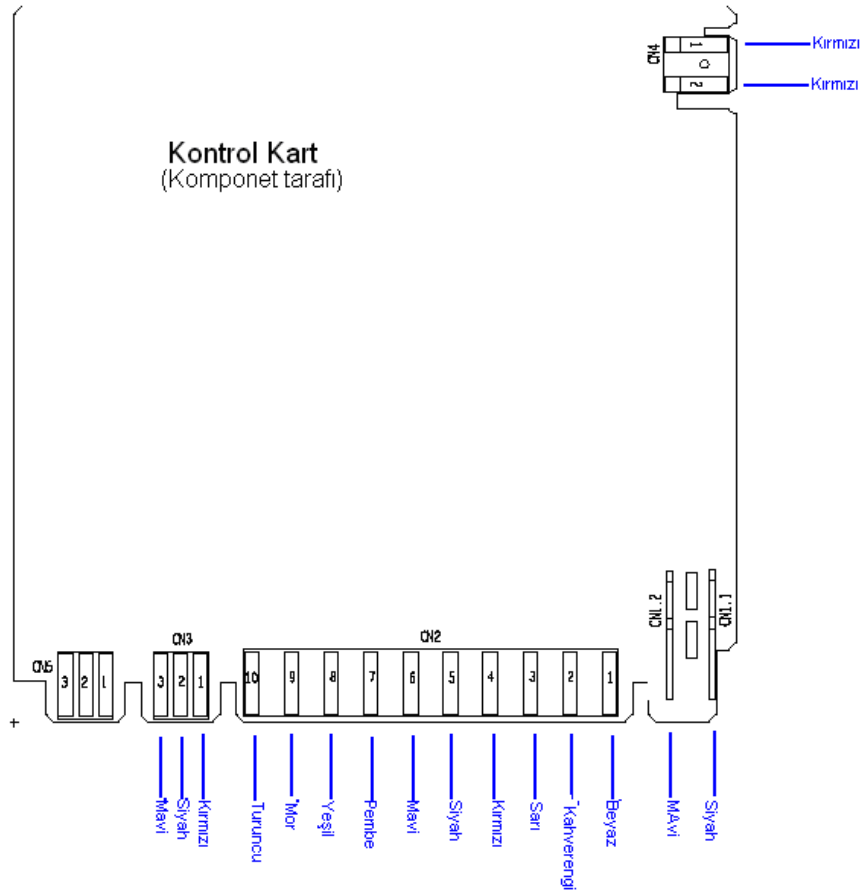

**CIRCUIT DIAGRAM**






## REPAIR TECHNIQUES

### COMPONENTS AND RESISTANCE VALUES


COMPONENTS	REAL VALUES	NOTES
ON / OFF BUTONU	0 $\Omega$ KOMPONENT ÜZERİNDEN	ON/OFF BUTTON IS PRESSED
DOOR SWITCH (KAPI KİLİDİ)	CN2.9 – CN2.2 0 $\Omega$	DOOR IS CLOSE
PRESSURE SWITCH	CN2.10 – CN2.2 0 $\Omega$ $\infty$ $\Omega$	FULL FILL WATER NO WATER
DRAIN PUMP	CN2.2 – CN2.4 143 $\Omega$ % $\pm$ 7	
WATER INLET VALVE	CN2.6 – CN 2.9 3750 $\Omega$ $\pm$ %10(20C°)	
REGENERATION VALVE	CN2.10 – CN2.7 4130 $\Omega$ $\pm$ %10(25 C°)	
DETERGENT DISPENSER	1660 $\Omega$ $\pm$ %10 (25 C °)	MEASURE JUST ON THE COMPONENT
CIRCULATION PUMP	CN2.3 – CN2.9 95 $\pm$ %7 $\Omega$ 126 $\pm$ % 7 $\Omega$	Primary winding Secondary winding (FROM THE COMPONENT)
SET NTC SENSOR	CN 3.2 CN 3.1 +25°C - 47.200 $\pm$ 1.416 $\Omega$ +30°C - 37.500 $\pm$ 1.125 $\Omega$ +40°C - 24.900 $\pm$ 747 $\Omega$ +50°C - 17.000 $\pm$ 510 $\Omega$ +60°C - 11.700 $\pm$ 351 $\Omega$ +70°C - 8.280 $\pm$ 248 $\Omega$ +80°C - 5.945 $\pm$ 178 $\Omega$	
FLOATER (MICROSWITCH )	CN2.1 – CN 2.5 0 $\Omega$ CN2.1 – CN 2.4 $\infty$ $\Omega$	MICROSW _TICH IS INACT _VE (NO WATER) M_KROSWITCH IS ACTIVE (THERE _S WATER))

## MEASURING THE COMPONENTS FROM THE

## ELECTRONICAL CARD

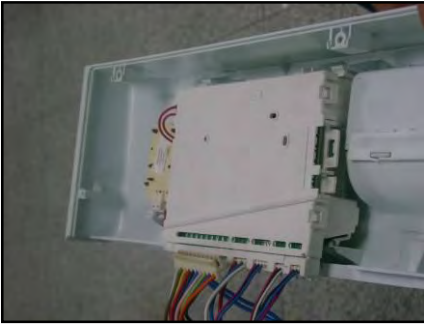

a)

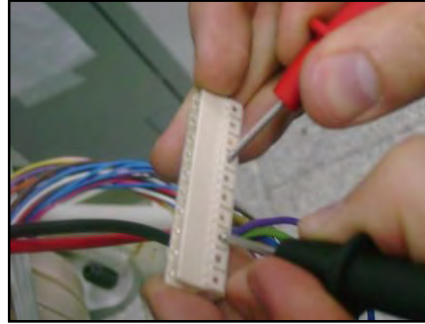

b)

In order to reach the connections of the electronic card; dismantle the control panel (Picture a) and probes of the tester should be applied on to the related connectors of the electronic card; control the values according to the resistance value table. (picture b)


**Precaution :** Always remove the plug from the power socket before touching internal components.

### Washing pump:

From the electronic card:

You can just measure the primary winding value from the electronic card.

Resistance value of the primary winding must be **95 Ω on the connectors CN2.3 –CN2.3 – CN2.9**

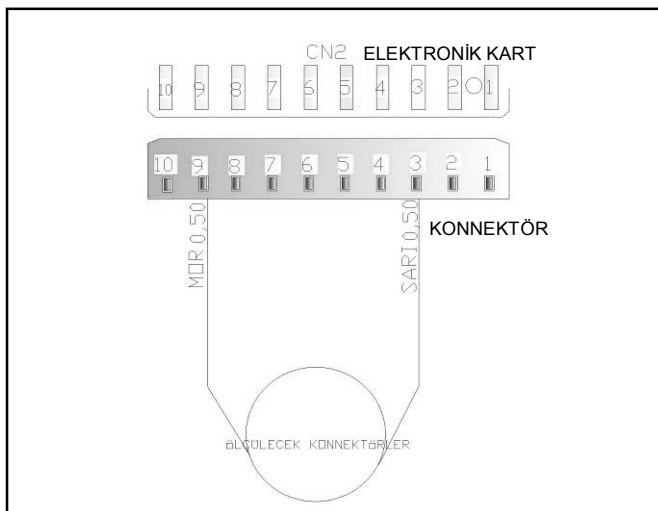

Above sketch show the connectors of the washing pump on the electrical card.  
Probes of the tester should be applied on to the related connect

ANA SARGI	95 ±%7 Ω
YARDIMCI SARGI	126 ±% 7 Ω

From the component:



Measurement of the primary  
windings of the washing pump


Measurement of the secondary  
windings of the washing pump  
(white cable-blue cable)

Probes of the tester should be applied on to the related connectors as shown on the pictures

### Drain Pump:

From the electrical card:

CN2.2 – CN2.4	143 Ω % ± 7
---------------	-------------

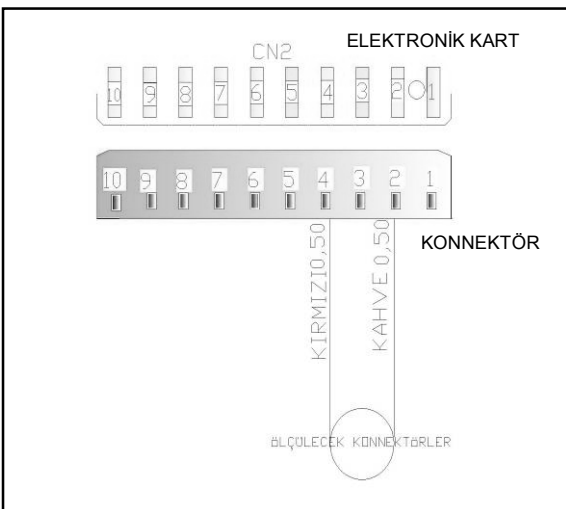

Above sketch show the connectors of the drain pump on the electrical card. Probes of the tester should be applied on to the related connectors.

From the component :




Probes of the tester should be applied on to the related connectors as shown on the pictures.

### Water inlet valve:


From the electrical card:

CN2.6 – CN 2.9	3750 $\Omega \pm 10$ ( 20 C°)
----------------	-------------------------------

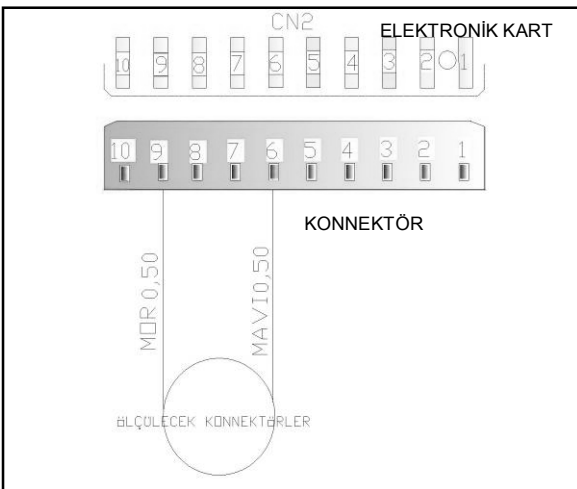

Above sketch show the connectors of the water inlet valve on the electrical card. probları tutacağınız Probes of the tester should be applied on to the related connectors.

From the components :

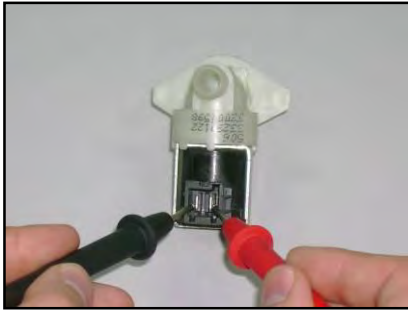


Probes of the tester should be applied on to the related connectors as shown on the pictures

### Detergent dispenser :

It can't be measured from the electrical card.


1660 $\Omega \pm 10$ (25 C °)
-------------------------------

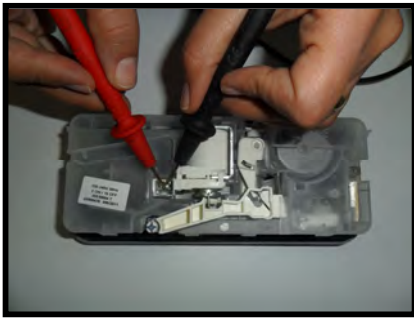

Probes of the tester should be applied on to the related connectors as shown on the Pictures

### Regeneration valve:


From the electrical card:

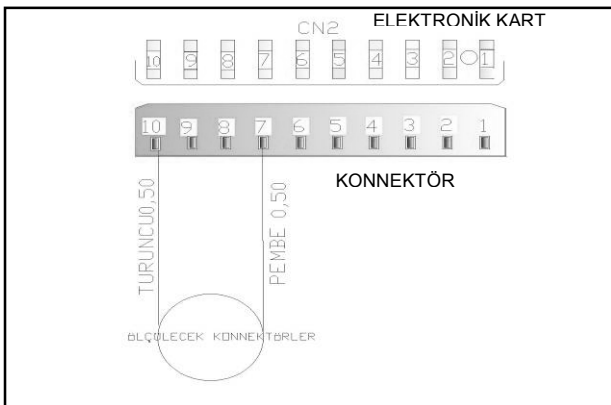

CN2.10 – CN2.7	4130 $\Omega \pm 10$ (25 C °)
----------------	-------------------------------

Sketch at the side show the connectors of the regeneration valve on the electrical card. Probes of the tester should be applied on to the related connectors.

### From the component :

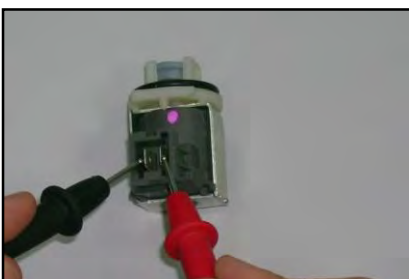


Probes of the tester should be applied on to the related connectors as shown on the pictures

**Pressure switch:**

From the electrical card:

<b>CN2.10 – CN2.2</b>	$\infty \Omega$ SU VARKEN(DOLU)
	$0 \Omega$ SU YOKKEN (BOŞ )

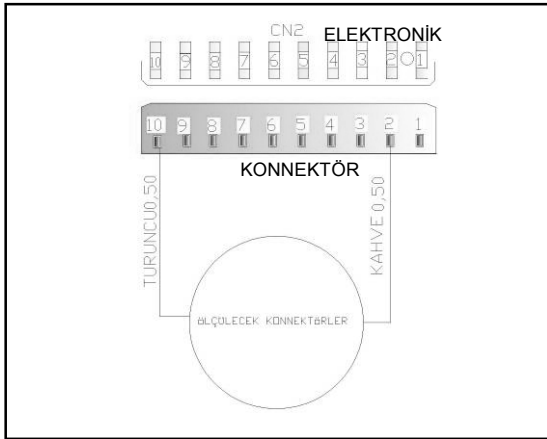


Above sketch show the connectors of the pressure switch on the electrical card. Probes of the tester should be applied on to the related connectors.

**NTC SENSOR:**

From the electrical card:

<b>CN 3.1 - CN 3.2</b>	+25°C - 47.200 ±1.416 $\Omega$
	+30°C - 37.500 ±1.125 $\Omega$
	+40°C - 24.900 ± 747 $\Omega$
	+50°C - 17.000 ± 510 $\Omega$
	+60°C - 11.700 ± 351 $\Omega$
	+70°C - 8.280 ± 248 $\Omega$
	+80°C - 5.945 ± 178 $\Omega$

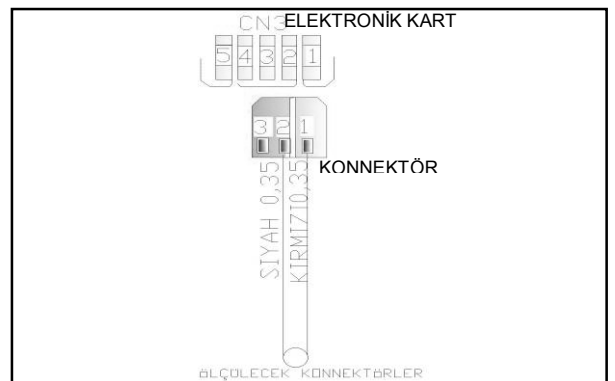


Above sketch show the connectors of NTC sensor on the electrical card. Probes of the tester should be applied on to the related connectors.

## ON/OFF BUTTON

When the buton pressed	0 $\Omega$
------------------------	------------

( can not be measured from the electrical card )

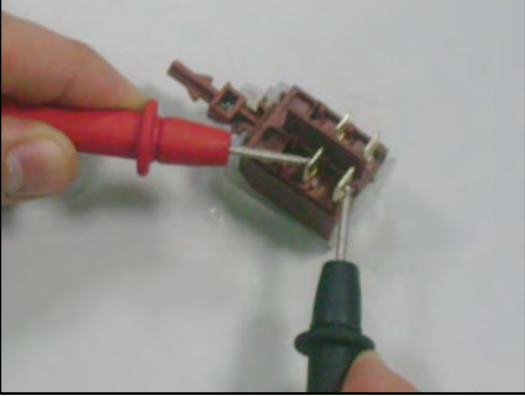


Probes of the tester should be applied on to the related connectors as shown on the pictures.

## DOOR SWITCH ( KAPI SWITCHI )

From the electrical card

CN2.9 – CN2.2	0 $\Omega$ ( door is close )
---------------	------------------------------

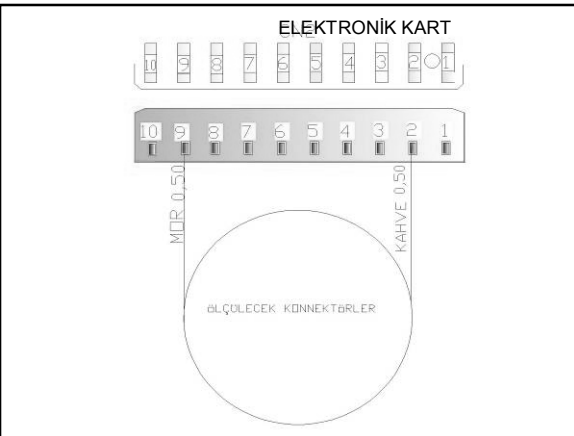

Above sketch show the connectors of the door switch on the electrical car


From the component :




Probes of the tester should be applied on to the related connectors.

## FLOATER


CN2.1 – CN 2.5 (KONUM 1)	(MICROSWITCH IS INACTIVE (NO WATER))
0 Ω	
CN2.1–CN2.4 (KONUM 2)	(M CROSWITCH IS ACTIVE (WATER))
∞ Ω	

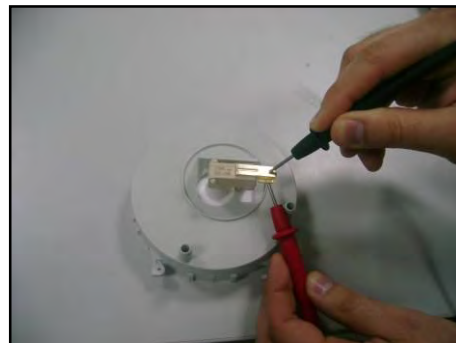

From the component :

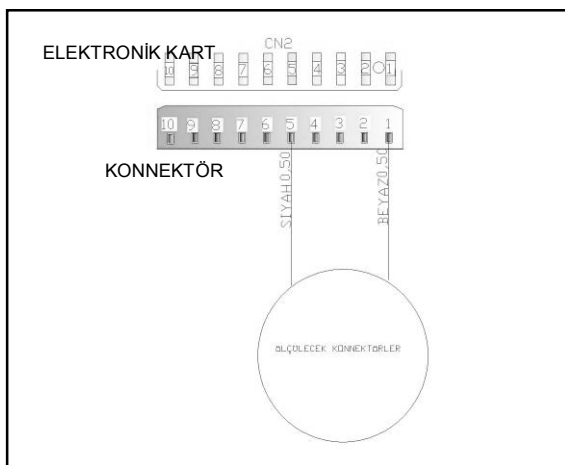

**Position 1:** You can check the floater by controlling the specified value intervals..

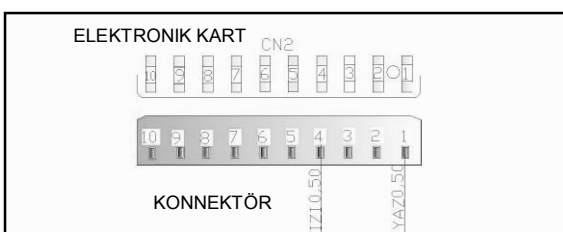



**Position 2:** If failure code is occurred related with the floater within control the above values; you can figure out whether leakage occurs or not.edebilirsiniz

