

 WHITE GOODS	FREEZER	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

Changing The Door Swing Direction to Right Hand

1- Unscrew the two screws fixing the top hinge (Fig-1) and bottom hinge. (Fig-2)
Remove the door. (Fig-1)



Figure 1



Figure 2

2- Remove the top hinge screw caps (big) on the left side (Fig-3) and insert them to the right side. (Fig-4)



Figure 3



Figure 4

3- Remove the bottom hinge screw caps (big) on the left side and insert them to the right side. (Fig-5)



Figure 5

 WHITE GOODS	FREEZER	CUSTOMER SUPPORT
	ASSEMBLE & DISASSEMBLE	

4- Assemble the top hinge to the bottom of the door (Fig-6) and assemble the door and then assemble the bottom hinge to the top of the door. (Fig-7)

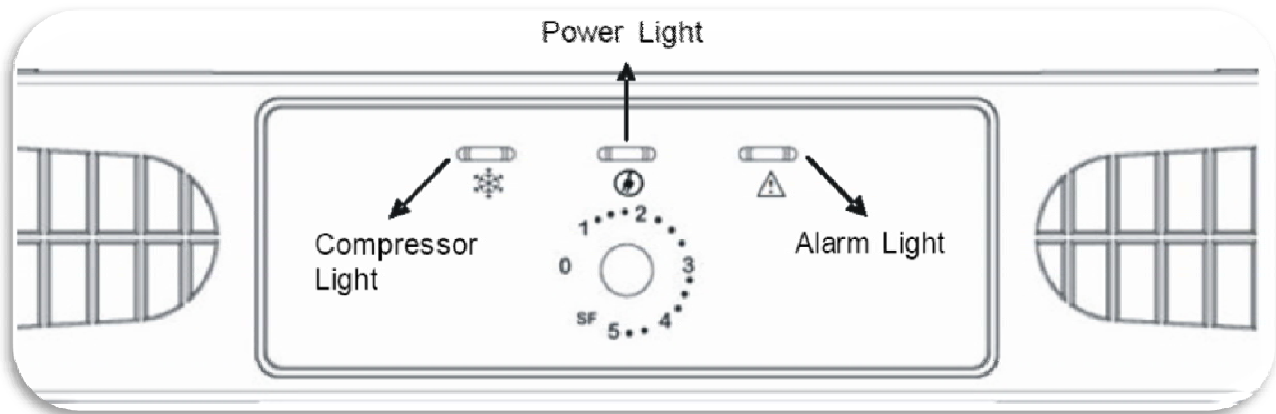


Figure 6



Figure 7

 WHITE GOODS	FREEZER	CUSTOMER SUPPORT
	THERMOSTAT SETTING	



The freezer thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position 1 to 5, colder temperatures can be obtained. "0" position shows thermostat is closed and no cooling will be available.

Freezer Thermostat Setting;

0 : The appliance is switched off.

1 - 2 : For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.

3 - 4 : For long-term storage of food in the freezer compartment, you can set knob to medium position.

5 : For freezing the fresh food. The appliance will run for colder temperatures.

SF : The compressor will start to run continuously with maximum performance. The freezer temperature will decrease and the appliance will switch to the lowest temperature. Place the food to be frozen quickly inside the freezer, preferably in the middle drawers. Once the food is frozen, you must set the thermostat knob to desired position.

Note 1; Observe that the orange lamp will light when the compressor runs. So when SF is active, the compressor will run continuously and the lamp will light continuously.

Note 2; The ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the refrigerator and freezer compartments. If required, change the temperature setting.

Display Panel

Compressor light : Lights orange, when the compressor runs. In SF mode, it will light continuously.

Power light: Lights green automatically, when the appliance is connected to the power supply.

Alarm light: Lights red, when the temperature rises to a critical point inside the freezer.